

NOTICE New

RX-Multi 300-868MHz



1. Specifications RX-Multi

2. Brand Selection

With the 8-bit DIP switch, users can select different brands of remote control channels. The brand selection is shown in Table 1.

3. Learning Remote Control

The multi-frequency controller has two independent output channels, each with independent learning buttons K1, K2.

4. Power Input

Multi-frequency controller power input range: AC/DC 12~30V.

5.5. How to enter controller to match remote controls and delete all remote controls

1. First, choose the right remote control brand to enter through the dial switch;
2. Press the learn button (K1 or K2) and digital tube display the corresponding number of channels, Press the button on the remote control and the digital tube number flashes 2 times, and this button successfully enters R-Multi.
3. Repeat step 2 for another button.
4. 2 channels in the same brand mode

Clear all data on the memory card:

Press and hold the learn button and the digital tube number will start to light up. Keep pressing this button, until the digital tube number indicator goes out. All data in the memory card will be permanently deleted.

Brand Selection

Item	Selection Dipswitch	Marcas /Brands	Frec.	Observations
1		NICE FLORS	433.92MHz	
2		MARANTEC	433.92MHz	
3		UNIVERSALFIXE CODE/CODIGO FIJO	433.92MHz	Fixe code
4		FAAC XT4/XT2 433RC	433.92MHz	
5		Universal Rolling code	433.92MHz	433.92MHZ
6		CODIGO FIJO	300.00MHz	frec.300.00MHz

Brand Selection

7		CODIGO FIJO	310.00MHz	freq.310.00MHz
8		CODIGO FIJO	315.00MHz	freq.315.00MHz
9		CODIGO FIJO	318.00MHz	freq.318.00MHz
10		CODIGO FIJO	330.00MHz	330.00MHz
11		CODIGO FIJO	390.00MHz	390.00MHz
12		Rollingcode fixe code	315.00MHz	
13		Hormann Marantec Berner	868.00MHz	
14		Sommer	868.00MHz	

Brand Selection

15		BFT	433MHz	
16		BENINCA	433MHz	
17		KEY	433MHz	
18		NICE-SMILO	433MHz	
19		HormanEcostar	433MHz	
20		FAAC XT4/XT2 868RC	868.00MHz	